
USB driver for hipecs PLC1xxx/CORE10 Tips for driver setup from 01.03.2017 and onwards



<u>Attention:</u> all devices with **selling date 01.03.2017 and newer**, use the standard USB driver (automatic installation). The previous driver from FBE is not compatible with the new devices.

<u>Alternative:</u> download driver from FTDI's homepage and install (http://www.ftdichip.com/Drivers/VCP.htm)

Additional settings when USB driver is installed:

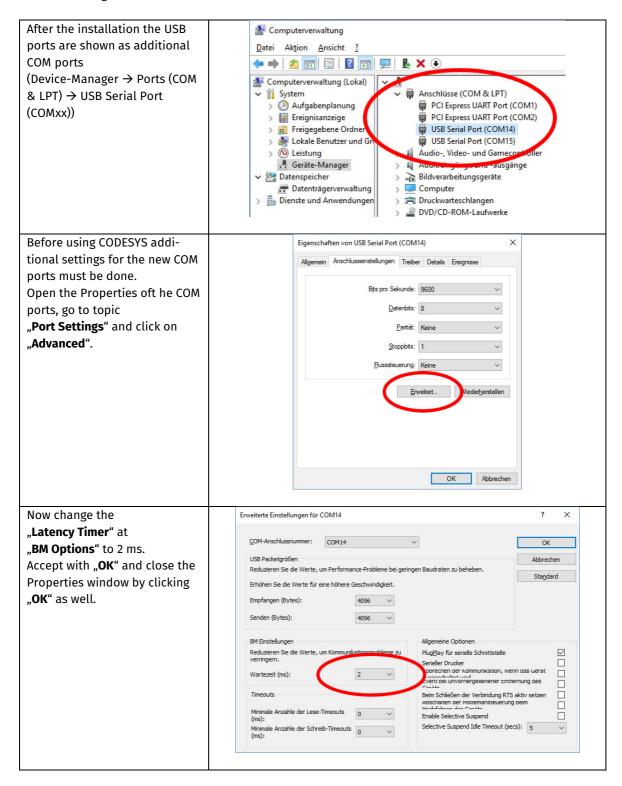

Everything else stays as is, one COM port is for CODESYS, the other one is for the terminal application (HyperTerminal, Tera Term etc.).